



VAPOR INTRUSION • LEED® TESTING • LANDFILL OPERATIONS
INDUSTRIAL HYGIENE • PRODUCT TESTING

Centek Laboratories

Air Quality Testing...It's a Gas



QUICK-GRAB SAMPLING INSTRUCTIONS


Please contact us with any questions, concerns, and/or feedback.
143 Midler Park Drive Syracuse, NY 13206
(315) 431-9730 www.CentekLabs.com



STEP 1

Pictured to the left is a Centek Labs QUICK-GRAB regulator.

The side labeled "FEMALE ENDING" is the end of the regulator that attaches to the canister for sample initiation

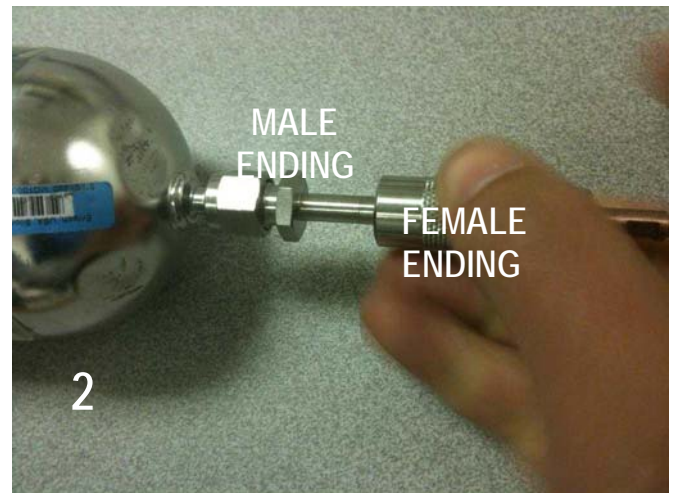

STEP 2

Pull back the the FEMALE ENDING of the quick grab. Insert the MALE ENDING of the canister. Release the FEMALE ENDING. Sampling will begin upon CONNECTION.



STEP 3

Upon sample completion, DISCONNECT the Centek Labs quick grab from the canister. Check the pressure of the canister with the vacuum gauge provided in your shipment. A reading at or below -15"ug is enough whole air sample for Centek Labs to analyze.

STEP 4

Make sure to fill out a Centek Labs Chain of Custody (COC).